

Always use a certified spreader bar!

Step 1

Adjust spreader bar to suit the width of the tank as per the diagram.

It is extremely important that the chains are pulling directly up. Eg not any further in or out from the side of the tank.

Step 2

Attach lifters to the spreader bar and insert rods into lifting holes in the sides of the tank. Ensure lifting gear is in good condition and fastened correctly.

Step 3

Ensure that the lifting chains are **vertical** and inline with the lifters - see diagram.

Step 4


Place 50mm ratchet strap around the tank and lifters. Ensure it is attached through the hooks on the lifters to prevent the lifters from slipping out.

Step 5

Before lifting tank, ensure there are no personnel within 10 metres.

Once the tank is fully suspended the rigger can step closer to guide the tank. Except for the person/s responsible for lifting and positioning of the tank, there must not be any person within 20 metres of the tank or installation site during lifting and positioning.

Reach of crane/crane truck to be determined by crane/crane truck operator.

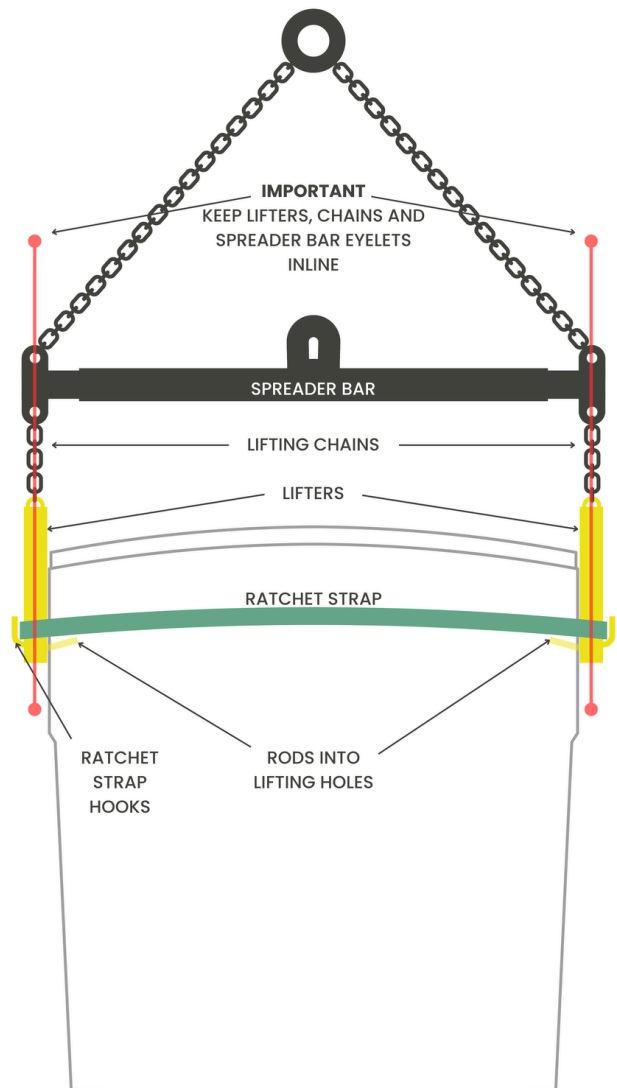

	AS-SE Standard	AS-TE Tall
Weight	6.7T	7T
Height	2275mm	2525mm
Diameter	2500mm	2500mm

